

ATC SURVEILLANCE MINIMUM ALTITUDE CHART - ICAO

VAR 4° E

AD ELEV 1907 FT



RADAR TOWER 128.975 120.100

TRANSITION ALTITUDE 10000

Lateral limits of minimum vectoring altitude sectors are provided as attachment to this chart.

Minimum flight altitudes (FT AMSL / FL) applicable for surveillance controlled aircraft within controlled airspace; values in brackets refer to minimum flight altitudes in uncontrolled airspace providing adequate obstacle clearance.

The chart may only be used for cross-checking of assigned altitudes whilst under radar control.

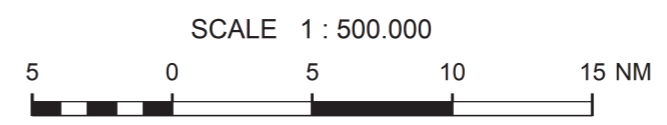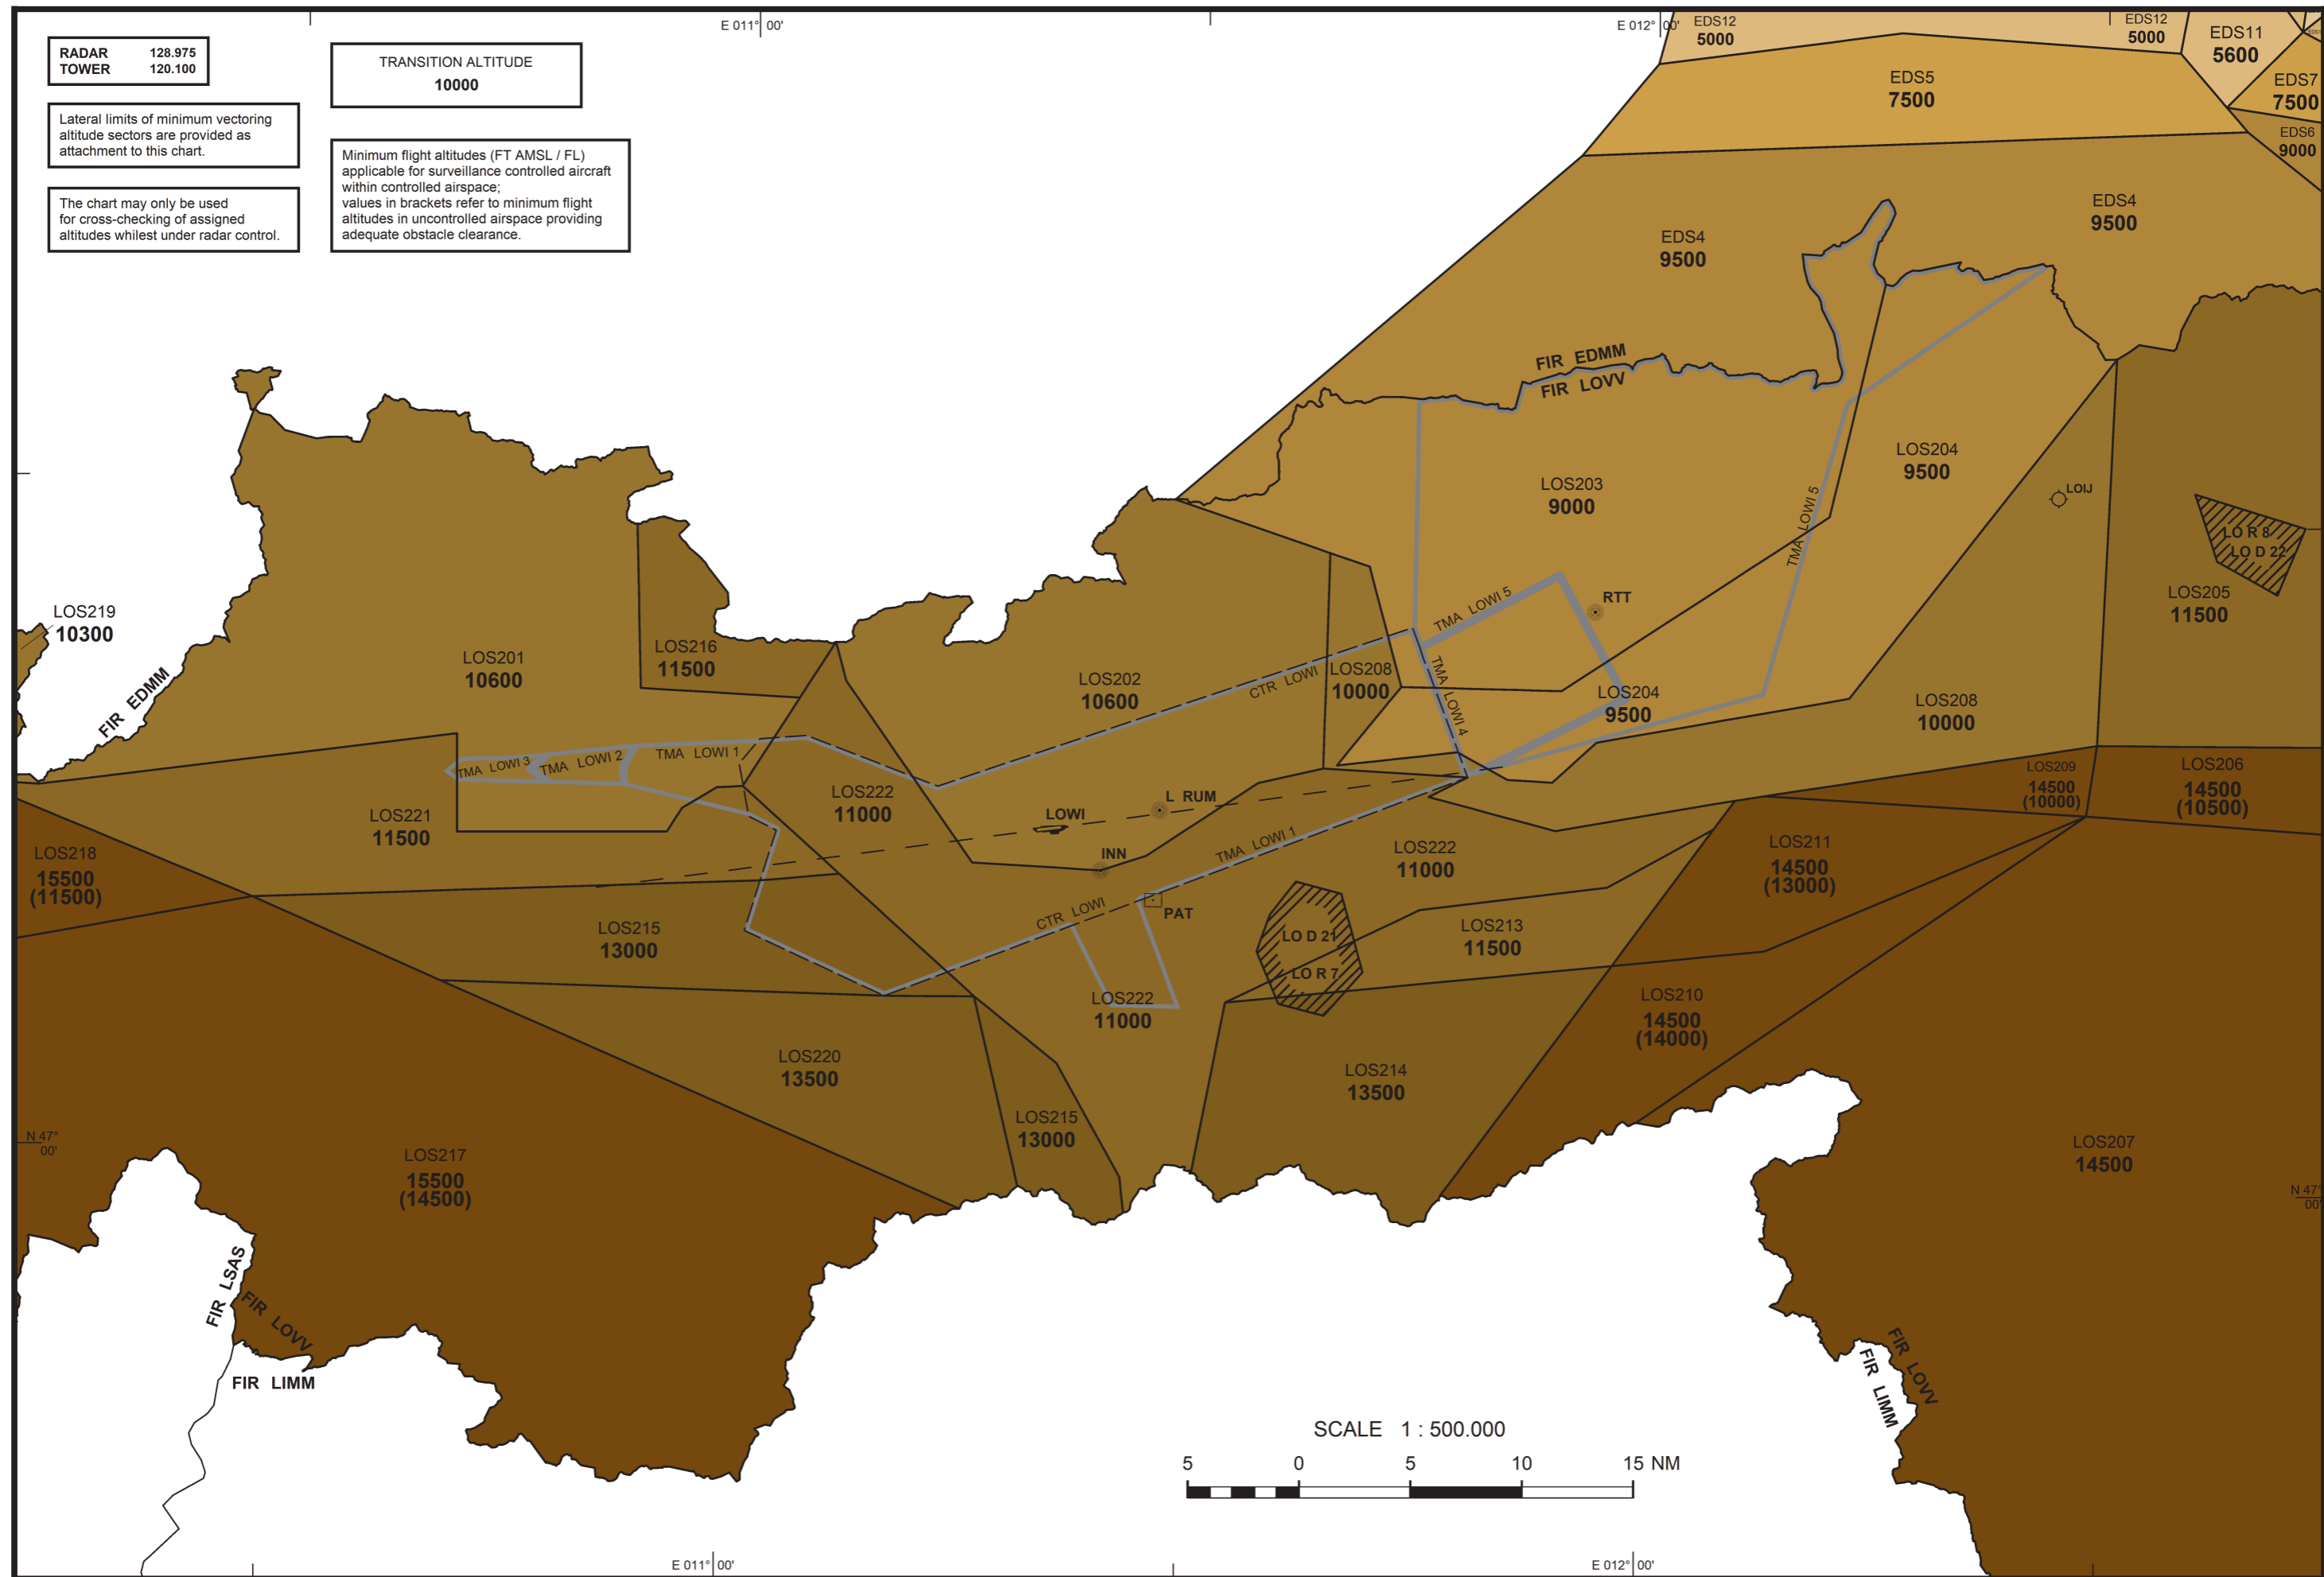

CHANGE: EDITORIAL

Bezeichnung Seitliche Begrenzungen
Name Lateral limits
<p>EDS10</p> <p>47 55 00.0000N 012 47 50.0000E - 47 51 46.0000N 012 50 58.0000E - 47 50 24.0000N 012 48 24.0000E - 47 52 18.0000N 012 42 54.0000E - 47 55 00.0000N 012 47 50.0000E</p>
<p>EDS11</p> <p>47 55 03.0000N 012 39 51.0000E - 47 52 18.0000N 012 42 54.0000E - 47 48 53.0000N 012 37 52.0000E - 47 51 17.0000N 012 34 46.0000E - 47 53 52.0000N 012 35 29.0000E - 47 55 03.0000N 012 39 51.0000E</p>
<p>EDS12</p> <p>48 22 00.0000N 013 00 00.0000E - 48 17 29.4680N 013 09 58.9780E - entlang der Bundesgrenze bis / along State Boundary to - 48 04 41.4097N 012 45 25.7328E - 47 56 03.0000N 012 43 37.0000E - 47 52 18.0000N 012 42 54.0000E - 47 55 03.0000N 012 39 51.0000E - 47 53 52.0000N 012 35 29.0000E - 47 51 17.0000N 012 34 46.0000E - 47 52 03.0000N 012 16 13.0000E - 47 50 30.0000N 012 00 00.0000E - 47 53 49.0000N 012 01 18.0000E - 48 00 00.0000N 012 30 00.0000E - 48 11 05.0000N 012 30 00.0000E - 48 22 00.0000N 013 00 00.0000E</p>
<p>EDS4</p> <p>47 46 20.0000N 011 55 00.0000E - 47 47 47.0000N 012 39 17.0000E - 47 44 03.0000N 012 46 18.0000E - 47 43 32.0927N 012 54 15.3805E - entlang der Bundesgrenze bis / along State Boundary to - 47 40 49.7456N 013 04 43.5871E - 47 37 52.0000N 012 55 43.0000E - 47 41 00.0000N 012 53 00.0000E - 47 41 00.0000N 012 46 00.0000E - 47 39 58.4577N 012 45 41.0992E - entlang der Bundesgrenze bis / along State Boundary to - 47 30 31.2392N 011 28 28.1406E - 47 46 20.0000N 011 55 00.0000E</p>
<p>EDS5</p> <p>47 50 30.0000N 012 00 00.0000E - 47 52 03.0000N 012 16 13.0000E - 47 51 17.0000N 012 34 46.0000E - 47 48 53.0000N 012 37 52.0000E - 47 47 47.0000N 012 39 17.0000E - 47 46 20.0000N 011 55 00.0000E - 47 50 30.0000N 012 00 00.0000E</p>
<p>EDS6</p> <p>47 47 00.1463N 012 56 18.3196E - entlang der Bundesgrenze bis / along State Boundary to - 47 43 32.0927N 012 54 15.3805E - 47 44 03.0000N 012 46 18.0000E - 47 47 47.0000N 012 39 17.0000E - 47 48 53.0000N 012 37 52.0000E - 47 47 00.1463N 012 56 18.3196E</p>
<p>EDS7</p> <p>47 51 46.0000N 012 50 58.0000E - 47 49 41.0000N 012 52 58.0000E - 47 47 52.0760N 012 57 42.5477E - entlang der Bundesgrenze bis / along State Boundary to - 47 47 00.1463N 012 56 18.3196E - 47 48 53.0000N 012 37 52.0000E - 47 52 18.0000N 012 42 54.0000E - 47 50 24.0000N 012 48 24.0000E - 47 51 46.0000N 012 50 58.0000E</p>
<p>EDS9</p> <p>48 04 41.4097N 012 45 25.7328E - entlang der Bundesgrenze bis / along State Boundary to - 47 52 00.6621N 012 59 22.9669E - 47 52 41.0000N 012 52 51.0000E - 47 51 46.0000N 012 50 58.0000E - 47 55 00.0000N 012 47 50.0000E - 47 52 18.0000N 012 42 54.0000E - 47 56 03.0000N 012 43 37.0000E - 48 04 41.4097N 012 45 25.7328E</p>
<p>LOS201</p> <p>47 21 11.1141N 011 03 58.5065E - 47 17 09.0000N 011 00 22.0000E - 47 17 03.1371N 010 58 39.7781E - 47 16 05.1895N 010 56 24.7727E - 47 15 00.2284N 010 55 27.5248E - 47 14 41.8764N 010 41 38.1771E - 47 19 05.9106N 010 41 24.9835E - 47 16 08.6244N 010 13 57.1401E - 47 16 12.0000N 010 10 42.0000E - 47 16 12.9026N 010 10 26.5890E - entlang der Bundesgrenze bis / along State Boundary to - 47 28 45.1359N 010 52 53.9302E - 47 21 24.2316N 010 53 26.7846E - 47 21 11.1141N 011 03 58.5065E</p>
<p>LOS202</p> <p>47 18 36.0000N 011 38 38.0000E - 47 17 53.0000N 011 34 21.0000E - 47 14 30.0000N 011 27 05.0000E - 47 13 48.0300N 011 24 06.7515E - 47 14 00.0000N 011 15 38.0000E - 47 22 00.0000N 011 07 00.0000E - 47 23 44.1754N 011 06 15.7176E - entlang der Bundesgrenze bis / along State Boundary to - 47 30 31.2392N 011 28 28.1406E - 47 28 16.5000N 011 38 47.4000E - 47 18 36.0000N 011 38 38.0000E</p>
<p>LOS203</p> <p>47 40 46.0350N 012 15 18.8835E - 47 30 17.0000N 012 11 48.5000E - 47 22 17.0000N 011 54 15.5000E - 47 22 20.0000N 011 43 40.0000E - 47 27 42.0000N 011 41 25.0000E - 47 28 16.5000N 011 38 47.4000E - 47 30 31.2392N 011 28 28.1406E - entlang der Bundesgrenze bis / along State Boundary to - 47 40 46.0350N 012 15 18.8835E</p>
<p>LOS204</p> <p>47 22 20.0000N 011 43 40.0000E - 47 18 45.1000N 011 39 31.7500E - 47 19 27.0000N 011 47 28.0000E - 47 18 15.2699N 011 50 48.4396E - 47 18 09.9250N 011 53 45.0521E - 47 20 00.0000N 011 56 37.5000E - 47 22 09.0000N 012 13 16.0000E - 47 37 31.1160N 012 30 44.1741E - entlang der Bundesgrenze bis / along State Boundary to - 47 40 46.0350N 012 15 18.8835E - 47 30 17.0000N 012 11 48.5000E - 47 22 17.0000N 011 54 15.5000E - 47 22 20.0000N 011 43 40.0000E</p>

Bezeichnung Seitliche Begrenzungen
Name Lateral limits
<p>LOS205</p> <p>47 37 31.1160N 012 30 44.1741E - 47 20 10.0000N 012 29 40.0000E - 47 20 10.0000N 012 54 50.0000E - 47 14 00.0000N 013 30 00.0000E - 47 02 45.0000N 013 41 00.0000E - 47 12 00.0000N 013 56 50.0000E - 47 25 39.9866N 013 39 52.4993E - 47 28 24.1664N 013 41 49.0275E - 47 30 48.0555N 013 40 38.6946E - 47 32 07.6867N 013 37 18.0274E - 47 31 31.6382N 013 33 07.8110E - 47 34 48.0000N 013 29 41.0000E - 47 27 14.0000N 013 29 45.0000E - 47 24 11.0000N 013 32 26.0000E - 47 20 31.0000N 013 33 37.0000E - 47 18 01.0000N 013 13 18.0000E - 47 27 14.0000N 013 13 08.0000E - 47 37 06.1061N 013 04 47.6619E - entlang der Bundesgrenze bis / along State Boundary to - 47 37 31.1160N 012 30 44.1741E</p>
<p>LOS206</p> <p>47 20 10.0000N 012 29 40.0000E - 47 20 10.0000N 012 54 50.0000E - 47 14 00.0000N 013 30 00.0000E - 47 15 57.0113N 012 51 38.9356E - 47 17 00.0000N 012 29 00.0000E - 47 20 10.0000N 012 29 40.0000E</p>
<p>LOS207</p> <p>47 02 58.2805N 011 59 39.8122E - 47 17 00.0000N 012 29 00.0000E - 47 15 57.0113N 012 51 38.9356E - 46 37 59.7431N 012 48 14.3375E - entlang der Bundesgrenze bis / along State Boundary to - 47 02 58.2805N 011 59 39.8122E</p>
<p>LOS208</p> <p>47 28 16.5000N 011 38 47.4000E - 47 27 42.0000N 011 41 25.0000E - 47 22 20.0000N 011 43 40.0000E - 47 18 45.1000N 011 39 31.7500E - 47 19 27.0000N 011 47 28.0000E - 47 18 15.2699N 011 50 48.4396E - 47 18 09.9250N 011 53 45.0521E - 47 20 00.0000N 011 56 37.5000E - 47 22 09.0000N 012 13 16.0000E - 47 37 31.1160N 012 30 44.1741E - 47 20 10.0000N 012 29 40.0000E - 47 17 43.1794N 012 07 46.0435E - 47 17 30.0000N 012 05 50.0000E - 47 16 00.0000N 011 54 00.0000E - 47 17 25.3394N 011 45 37.4760E - 47 18 20.0000N 011 48 10.0000E - 47 18 36.0000N 011 38 38.0000E - 47 28 16.5000N 011 38 47.4000E</p>
<p>LOS209</p> <p>47 17 43.1794N 012 07 46.0435E - 47 20 10.0000N 012 29 40.0000E - 47 17 00.0000N 012 29 00.0000E - 47 17 43.1794N 012 07 46.0435E</p>
<p>LOS210</p> <p>46 59 32.8579N 011 46 54.3992E - 47 09 59.4014N 011 57 52.9796E - 47 10 45.0000N 012 07 55.0000E - 47 17 00.0000N 012 29 00.0000E - 47 02 58.2805N 011 59 39.8122E - entlang der Bundesgrenze bis / along State Boundary to - 46 59 32.8579N 011 46 54.3992E</p>
<p>LOS211</p> <p>47 17 30.0000N 012 05 50.0000E - 47 17 43.1794N 012 07 46.0435E - 47 17 00.0000N 012 29 00.0000E - 47 10 45.0000N 012 07 55.0000E - 47 09 59.4014N 011 57 52.9796E - 47 16 11.0750N 012 04 26.2411E - 47 17 30.0000N 012 05 50.0000E</p>
<p>LOS213</p> <p>47 08 00.0000N 011 32 30.0000E - 47 12 20.0000N 011 45 10.0000E - 47 13 30.0000N 011 57 30.0000E - 47 16 11.0750N 012 04 26.2411E - 47 09 59.4014N 011 57 52.9796E - 47 08 00.0000N 011 32 30.0000E</p>
<p>LOS214</p> <p>47 08 00.0000N 011 32 30.0000E - 47 09 59.4014N 011 57 52.9796E - 46 59 32.8579N 011 46 54.3992E - entlang der Bundesgrenze bis / along State Boundary to - 47 00 18.3509N 011 30 30.8180E - 47 08 00.0000N 011 32 30.0000E</p>
<p>LOS215</p> <p>46 59 32.1271N 011 19 09.6490E - 47 07 59.5560N 011 15 59.3514E - 47 07 55.0000N 011 10 05.0000E - 47 08 00.0000N 010 40 51.5200E - 47 11 28.0000N 010 28 19.0000E - 47 12 55.9411N 011 01 40.2202E - 47 13 20.1475N 011 06 54.1124E - 47 08 00.0000N 011 16 00.0000E - 47 05 06.0000N 011 21 31.0000E - 47 00 03.0000N 011 25 50.0000E - 46 58 27.9363N 011 26 08.5265E - entlang der Bundesgrenze bis / along State Boundary to - 46 59 32.1271N 011 19 09.6490E</p>
<p>LOS216</p> <p>47 28 45.1359N 010 52 53.9302E - 47 21 24.2316N 010 53 26.7846E - 47 21 11.1141N 011 03 58.5065E - 47 23 44.1754N 011 06 15.7176E - entlang der Bundesgrenze bis / along State Boundary to - 47 28 45.1359N 010 52 53.9302E</p>
<p>LOS217</p> <p>47 03 38.7887N 009 36 25.4815E - 47 11 28.0000N 010 28 19.0000E - 47 08 00.0000N 010 40 51.5200E - 46 58 27.1741N 011 15 24.1093E - entlang der Bundesgrenze bis / along State Boundary to - 46 51 17.6926N 010 28 10.7570E - entlang der Bundesgrenze bis / along State Boundary to - 47 03 38.7887N 009 36 25.4815E</p>
<p>LOS218</p> <p>47 11 28.0000N 010 28 19.0000E - 47 16 04.0000N 010 10 00.0000E - 47 18 08.2308N 010 02 44.7838E - 47 24 30.4272N 009 39 06.8780E - entlang der Bundesgrenze bis / along State Boundary to - 47 03 38.7887N 009 36 25.4815E - 47 11 28.0000N 010 28 19.0000E</p>

Bezeichnung Seitliche Begrenzungen
Name Lateral limits
<p>LOS219</p> <p>47 24 30.4272N 009 39 06.8780E - 47 18 08.2308N 010 02 44.7838E - 47 16 04.0000N 010 10 00.0000E - 47 16 12.9026N 010 10 26.5890E - entlang der Bundesgrenze bis / along State Boundary to - 47 32 00.4337N 009 43 41.0052E - 47 32 21.0120N 009 33 49.4028E - entlang der Bundesgrenze bis / along State Boundary to - 47 24 30.4272N 009 39 06.8780E</p>
<p>LOS220</p> <p>46 59 32.1271N 011 19 09.6490E - 47 07 59.5560N 011 15 59.3514E - 47 07 55.0000N 011 10 05.0000E - 47 08 00.0000N 010 40 51.5200E - 46 58 27.1741N 011 15 24.1093E - entlang der Bundesgrenze bis / along State Boundary to - 46 59 32.1271N 011 19 09.6490E</p>
<p>LOS221</p> <p>47 16 12.9026N 010 10 26.5890E - 47 16 04.0000N 010 10 00.0000E - 47 11 28.0000N 010 28 19.0000E - 47 12 55.9411N 011 01 40.2202E - 47 13 20.1475N 011 06 54.1124E - 47 17 09.0000N 011 00 22.0000E - 47 17 03.1371N 010 58 39.7781E - 47 16 05.1895N 010 56 24.7727E - 47 15 00.2284N 010 55 27.5248E - 47 14 41.8764N 010 41 38.1771E - 47 19 05.9106N 010 41 24.9835E - 47 16 08.6244N 010 13 57.1401E - 47 16 12.0000N 010 10 42.0000E - 47 16 12.9026N 010 10 26.5890E</p>
<p>LOS222</p> <p>47 23 44.1754N 011 06 15.7176E - 47 21 11.1141N 011 03 58.5066E - 47 17 09.0000N 011 00 22.0000E - 47 13 20.1475N 011 06 54.1124E - 47 08 00.0000N 011 16 00.0000E - 47 05 06.0000N 011 21 31.0000E - 47 00 03.0000N 011 25 50.0000E - 46 58 27.9363N 011 26 08.5265E - entlang der Bundesgrenze bis / along State Boundary to - 47 00 18.3509N 011 30 30.8180E - 47 08 00.0000N 011 32 30.0000E - 47 12 20.0000N 011 45 10.0000E - 47 13 30.0000N 011 57 30.0000E - 47 16 11.0750N 012 04 26.2411E - 47 17 30.0000N 012 05 50.0000E - 47 16 00.0000N 011 54 00.0000E - 47 17 25.3394N 011 45 37.4760E - 47 18 20.0000N 011 48 10.0000E - 47 18 36.0000N 011 38 38.0000E - 47 17 53.0000N 011 34 21.0000E - 47 14 30.0000N 011 27 05.0000E - 47 13 48.0300N 011 24 06.7515E - 47 14 00.0000N 011 15 38.0000E - 47 22 00.0000N 011 07 00.0000E - 47 23 44.1754N 011 06 15.7176E</p>